

AS066 Programmiertabelle

Rufzeichen und Wartezeiten werden entsprechend der folgenden Tabelle am DIL-Schalter eingestellt.

Programmiertabelle									
Rufzeichen									
Anzahl Tx	Schalter								Rufz.
	1	2	3	4	5	6	7	8	
	x	x	on	on	on	on	on	on	MO
1/1	x	x	on	on	off	on	on	off	MOE
1/2	x	x	on	off	on	on	on	off	MOE
2/2	x	x	on	off	on	on	off	on	MOI
1/3	x	x	on	off	off	on	on	off	MOE
2/3	x	x	on	off	off	on	off	on	MOI
3/3	x	x	on	off	off	on	off	off	MOS
1/4	x	x	off	on	on	on	on	off	MOE
2/4	x	x	off	on	on	on	off	on	MOI
3/4	x	x	off	on	on	on	off	off	MOS
4/4	x	x	off	on	on	off	on	on	MOH
1/5	x	x	off	on	off	on	on	off	MOE
2/5	x	x	off	on	off	on	off	on	MOI
3/5	x	x	off	on	off	on	off	off	MOS
4/5	x	x	off	on	off	off	on	on	MOH
5/5	x	x	off	on	off	off	on	off	MO5
1/6	x	x	off	off	on	on	on	off	MOE
2/6	x	x	off	off	on	on	off	on	MOI
3/6	x	x	off	off	on	on	off	off	MOS
4/6	x	x	off	off	on	off	on	on	MOH
5/6	x	x	off	off	on	off	on	off	MO5
6/6	x	x	off	off	on	off	off	on	MOA
Dauerträger									
	x	x	off	off	off	off	off	off	
Wartezeit									
Zeit	Schalter								Min.
	1	2	3	4	5	6	7	8	
1	on	on	x	x	x	x	x	x	0
2	off	on	x	x	x	x	x	x	15
3	on	off	x	x	x	x	x	x	30
4	off	off	x	x	x	x	x	x	60